


A. <<Optoma HD81 HDMI Connection diagram >>


1/. Direct connect

- Connect a HDMI source (DVD source) to "From/ AV Receiver" HDMI socket
- Only one DVD can be connected

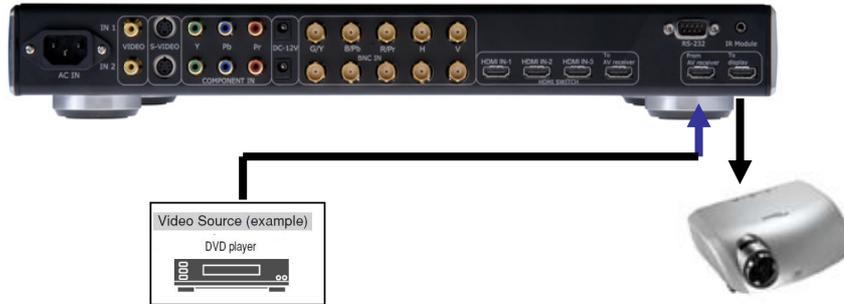


2/. Multiple Inputs connection (3 Inputs)

- Connect **HDMI Jumper** cable between "To/ AV Receiver" and "From/ AV Receiver"
- Connect HDMI sources (DVD source) to HDMI-1, HDMI-2 或 HDMI-3
- Select the display port HDMI-1, HDMI-2 或 HDMI-3 on the On-screen Mar

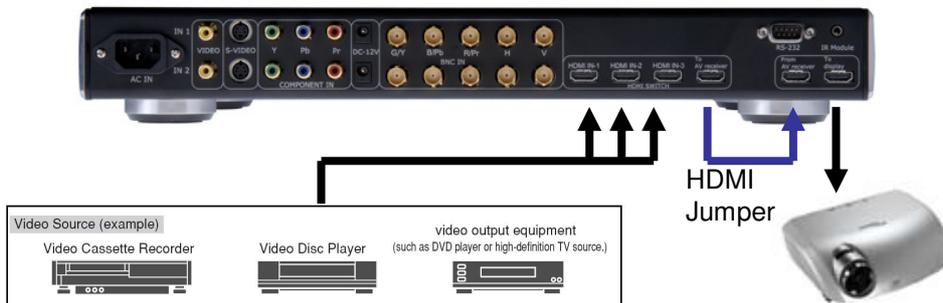


B. <<Control Wire connection>>

- Both ends are RS232 male

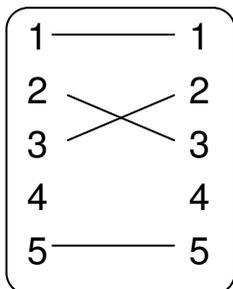

4 pins Setup

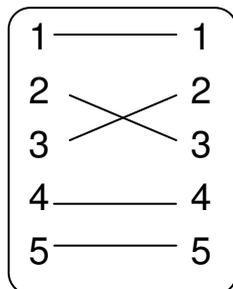

5 pins setup



RS232 male